


[Windows Mode]

- 1.1 Get BIOS Package.
- 1.2 Copy all folders to a storage device.

[By Windows command line](#)

2. Run Command Prompt as **Administrator** in Microsoft Windows.

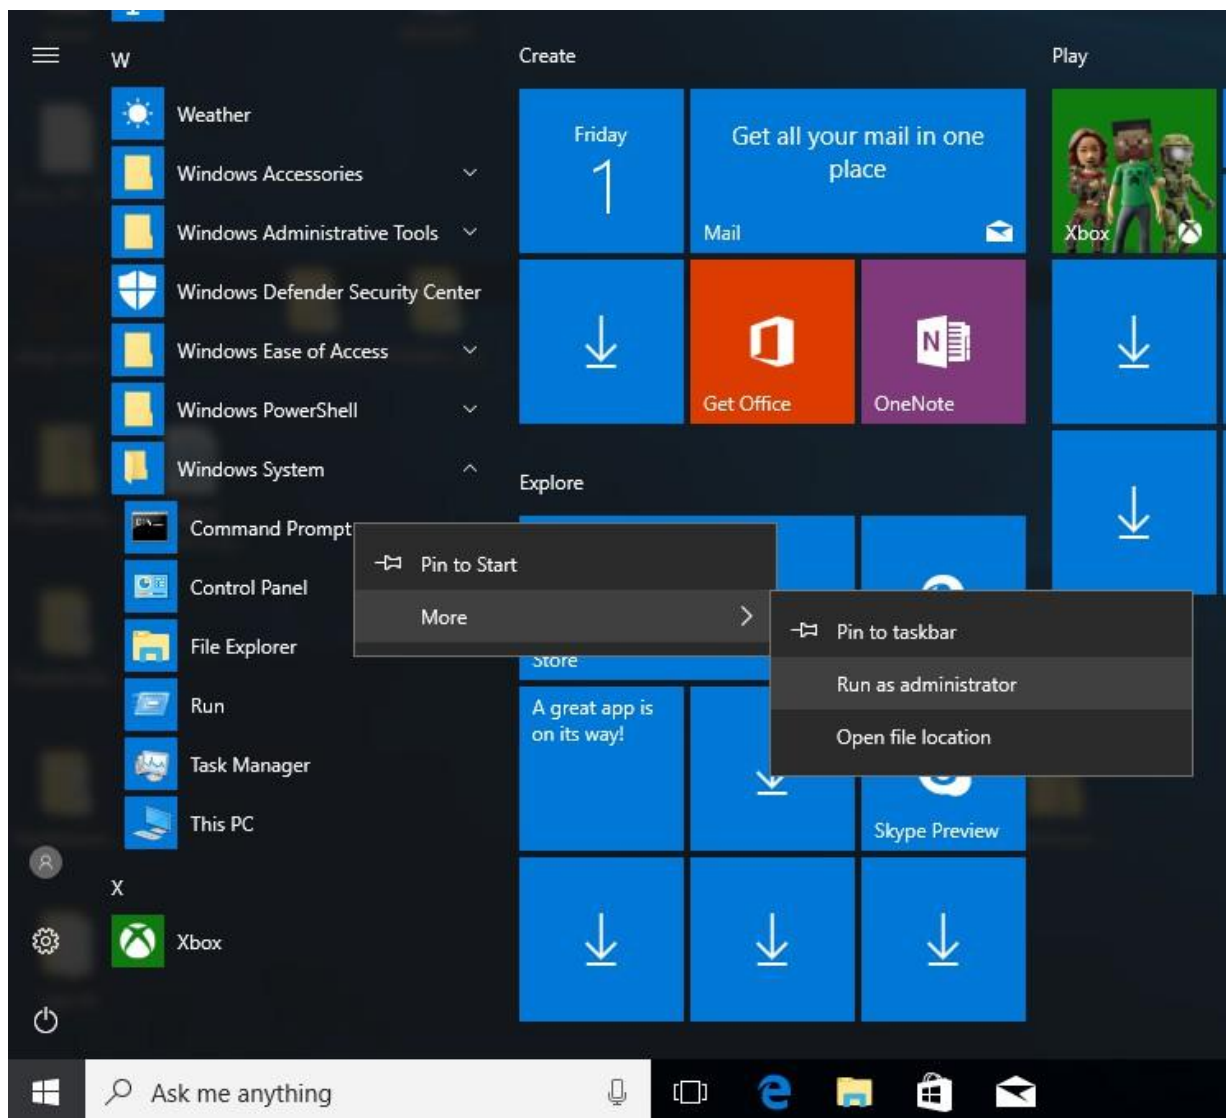

Windows

2.1 Key in 'cd win' (Go to BIOS path, e.g. "E: \WIN")

```
Microsoft Windows [Version 10.0.15063]
(C) 2017 Microsoft Corporation. All right reserved.

C:\Users\user>e:

E:\>cd WIN
```

2.2 Key in 'flash_x64.bat' or 'flash_x64' for 64-bit Windows and following pictures are reference only.

```
C:\Users\user>e:

E:\>cd WIN

E:\WIN>FLASH_x64.bat
```

2.3 Press <Enter> to start flashing system BIOS and ME firmware automatically .

```
Microsoft Windows [Version 10.0.15063]
(C) 2017 Microsoft Corporation. All right reserved.

C:\Users\user>e:

E:\>cd WIN

E:\WIN>FLASH_x64.bat

E:\WIN>AFUWINx64.exe ..\ROM\R01-A0.CAP /P /B /N /R /MEUL /CAPSULE

+-----+
|               AMI Firmware Update Utility v5.09.02.1384               |
|               Copyright (C)2017 American Megatrends Inc. All Rights Reserved.               |
+-----+


Reading flash .....done
- FFS checksums .....ok
- Check RomLayout .....Ok .
Loading capsule to secure memory buffer..... done
Input the ME Local data into the BIOS..... done
System is going to shutdown, are you ready? (Y/N) . . _
```

2.4 Press<Y>, system will be going to shutdown.

2.5 System will auto reboot and flash BIOS.

2.6 After the update is completed, the system will automatically reboot.

System BIOS Update SOP for Windows

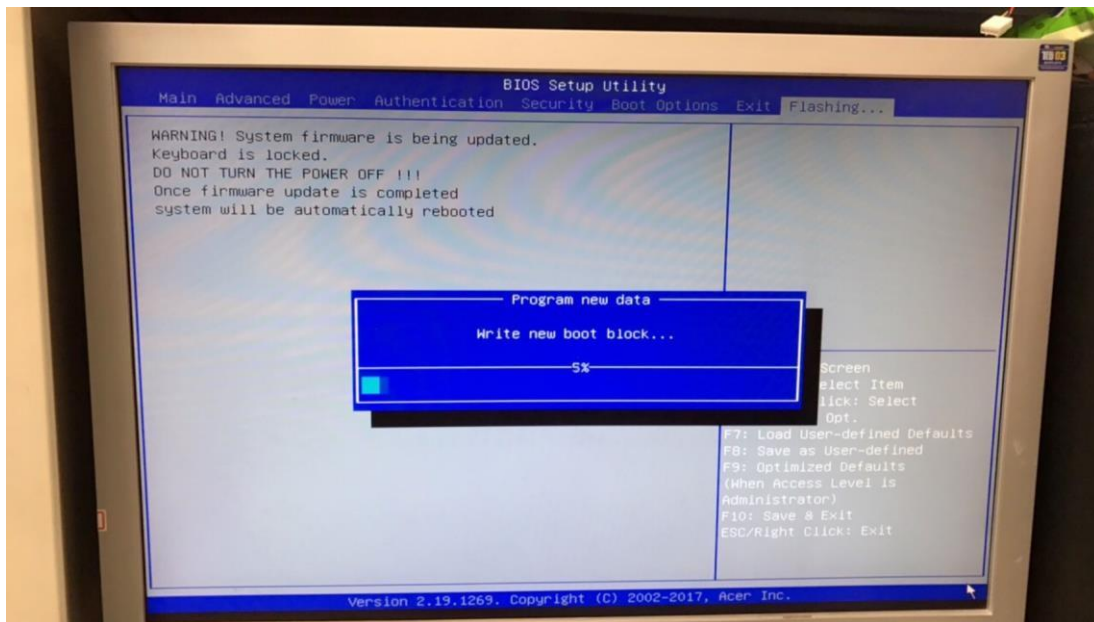

2.7 If the system emits beeping sounds after power-on, shut down the system and unplug the power cord for 10 seconds, then plug it back in and power on again. The system should boot normally.