


BIOS Update SOP for Microsoft Windows 10, 11


Please ensure your existing system BIOS version is R01-XX, otherwise, please abort the following BIOS update immediately.

In [Windows Mode]

1. Please visit the official Altos website and download the latest firmware update package ZIP file for your product model.
(<https://www.altoscomputing.com/en-US/download>)
2. Please decompress the ZIP file first and copy "UCP" folder including sub-folder files into an external USB flash drive storage device.
3. Go to UCP working path and execute the "R01-B0" executable file as **Administrator Role** in Windows OS.

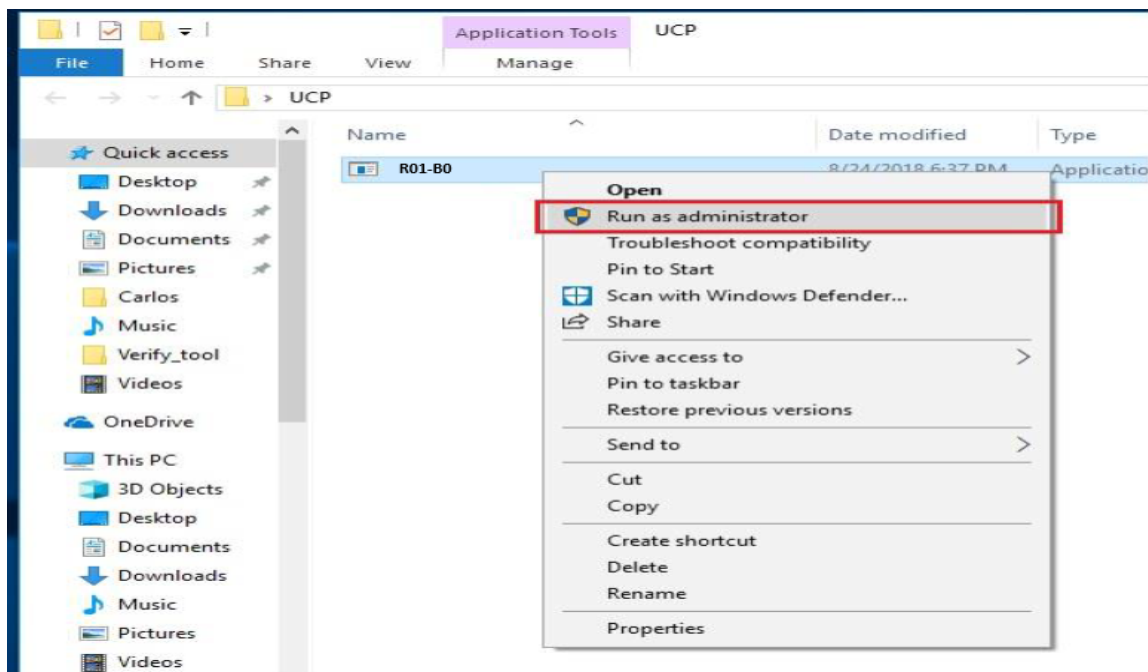


2.1 Choose "YES" to execute.

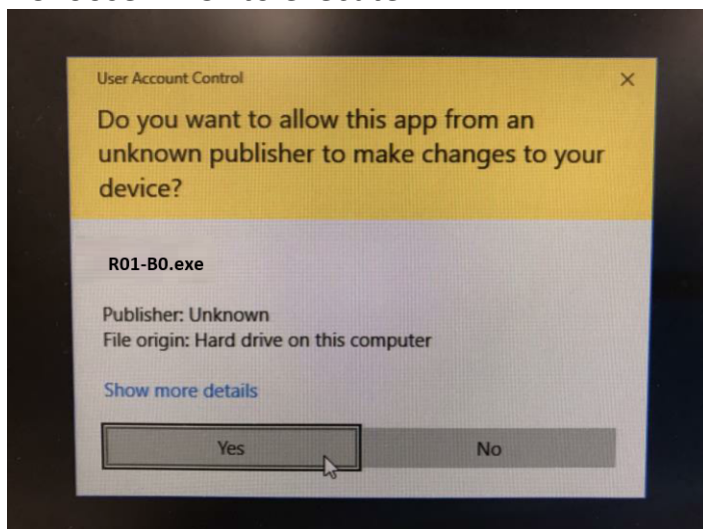

BIOS Update SOP for Microsoft Windows 10, 11

2.2 The system will ask : System is going to shut down, are you ready?

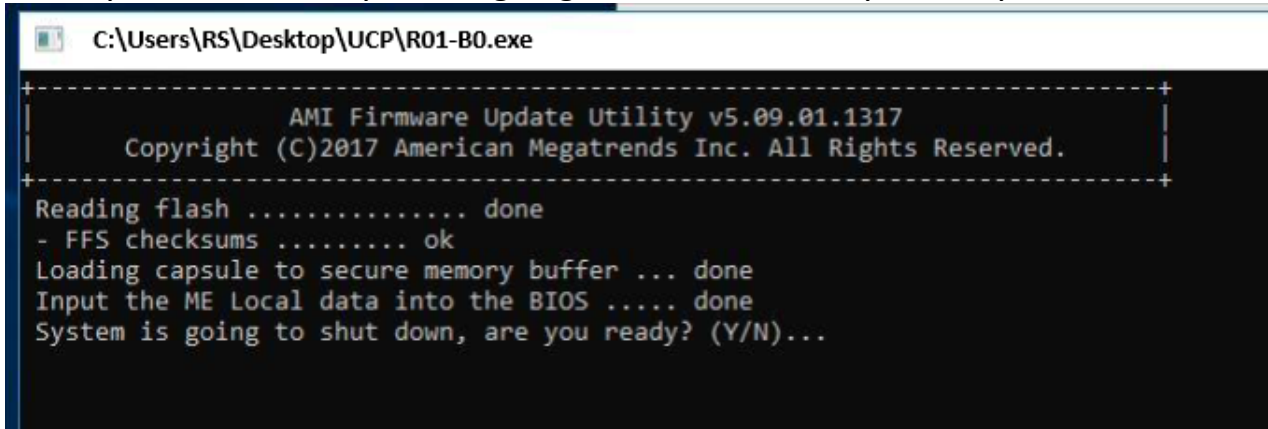

```
C:\Users\RS\Desktop\UCP\R01-B0.exe

+-----+
|               AMI Firmware Update Utility v5.09.01.1317               |
|      Copyright (C)2017 American Megatrends Inc. All Rights Reserved.      |
+-----+

Reading flash ..... done
- FFS checksums ..... ok
Loading capsule to secure memory buffer ... done
Input the ME Local data into the BIOS ..... done
System is going to shut down, are you ready? (Y/N)...
```

2.3 Press<Y>, system will be going to shut down.



```
+-----+
|               AMI Firmware Update Utility v5.09.01.1317               |
|      Copyright (C)2017 American Megatrends Inc. All Rights Reserved.      |
+-----+

Reading flash ..... done
- FFS checksums ..... ok
Loading capsule to secure memory buffer ... done
Input the ME Local data into the BIOS ..... done
System is going to shutdown, are you ready? (Y/N) ... Y
```

2.4 System will auto reboot and start flashing the BIOS.

